



VAr-Min Networking Quick Start Guide

Device

Front

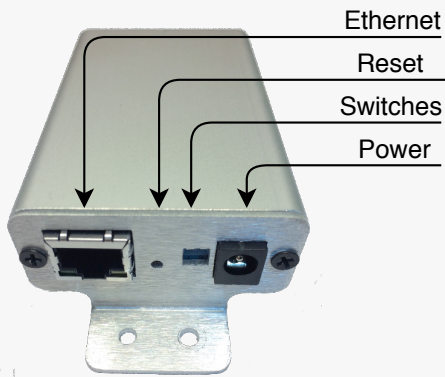

Back

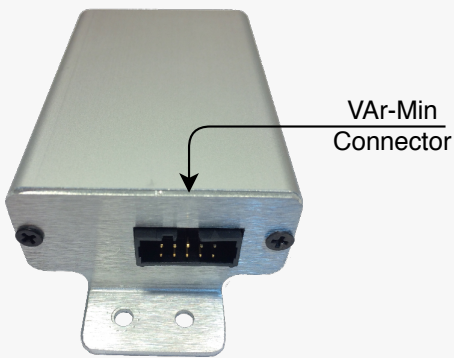

Defaults

Device Info

Default Network Info:

IP: 192.168.1.87
GW: 192.168.1.1
SUB: 255.255.255.0

Recovery Network Info:

IP: 192.168.1.87
GW: 192.168.1.1
SUB: 255.255.255.0

Socket Info

Defaults:

Socket 0:

- Port 4000
- Connected to VAr-Min Modbus port

Socket 1:

- Port 4001
- Connected to VAr-Min DNP port

Procedures

Change Network Settings

1. Power IP-8 Mini using provided cable.
2. Plug Ethernet cable directly into your computer.
3. Configure your computers network card to:
IP: 192.168.1.100
GW: 192.168.1.1
SUB: 255.255.255.0
4. Open a web browser and navigate to 192.168.1.87
5. Fill out the new network information you desire.
6. Click the "Submit" button.

Recover Defaults

1. Power IP-8 Mini using the provided cable.
2. Place switch 1 and switch 2 to the down position.
3. press the reset button.
4. Place switch 1 and switch 2 in the up position.

Support

Email:
support@valquest.com

Phone:
(972) 234-2954

Web:
Valquest.com